


**BEECHCRAFT
DUKE 60 SERIES
MAINTENANCE MANUAL**

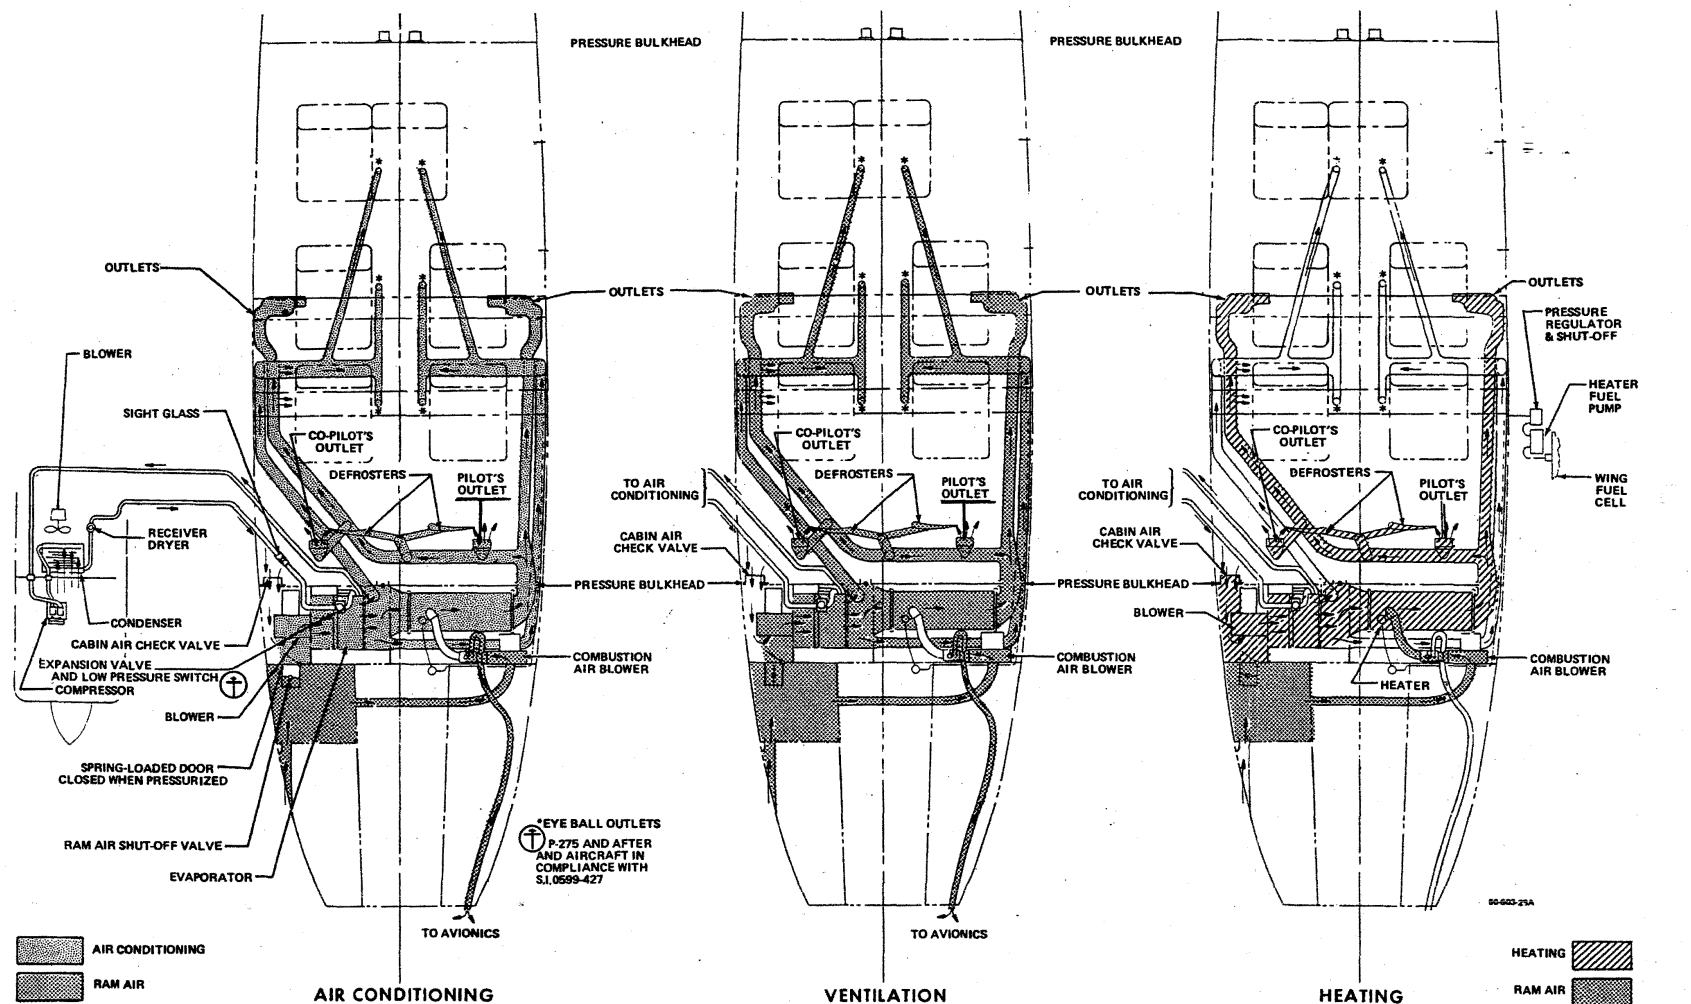

**Air Conditioning Distribution System (P-247 and after)
Figure 203**

"END"