

**BEECHCRAFT  
DUKE 60 SERIES  
MAINTENANCE MANUAL**

**CHAPTER 9**

***LIST OF PAGE EFFECTIVITY***

<b>CHAPTER SECTION SUBJECT</b>	<b>PAGE</b>	<b>DATE</b>
<b>9-EFFECTIVITY/CONTENTS</b>	<b>1</b>	<b>Nov 2/73</b>
<b>9-00-00</b>	<b>201</b>	<b>Nov 2/73</b>

**CHAPTER 9 - TOWING AND TAXIING**

***TABLE OF CONTENTS***

<b>SUBJECT</b>	<b>CHAPTER SECTION SUBJECT</b>	<b>PAGE</b>
<b>GENERAL</b>	<b>9-00-00</b>	<b>201</b>
<b>Maintenance Practices</b>		<b>201</b>

**"END"**

**BEECHCRAFT  
DUKE 60 SERIES  
MAINTENANCE MANUAL**

**GENERAL - MAINTENANCE PRACTICES**

Attach the hand towbar to the tow lug on the nose gear lower torque knee.

***CAUTION***

When towing with a tug, observe turn limits as

placarded on the nose gear to prevent damage to the gear.

***CAUTION***

Do not push on propeller or control surfaces. Do not place your weight on the horizontal stabilizers to raise the nose wheel off the ground.

**"END"**